

Installation Instructions

TR8000 L



Caution - Refer to accompanying documents.



Caution - Risk of electrical shock.



Electrical installation of this equipment should only be performed by trained personnel in accordance with local electrical wiring regulations (in North America, refer to NEC and CSA C22.2 CEC Part 1). Before working with this equipment, isolate it from any electrical source and lock out/tag out.

Detailed installation instructions for L5000 Plus units can be found at: <http://www.johnsondiversey-equipment.com>



When using Formula/Latched Mode with Automatic Formula Selection (AFS), the T8 input/output is used for signal monitoring.

1. L5000 Plus - TR8000 L Module Replacement


WARNING Isolate machine before removing covers

TR8000 L


WARNING
ISOLATE MACHINE BEFORE REMOVING COVERS
ATTENTION
ISOLER MACHINE AVANT D'OTER LES COUVERTURES
ACHTUNG
MASCHINE ISOLIEREN BEVOR ENTSTÜRKUNG DER DECKEN
AVISO
AVISO LA MÁQUINA ANTES DE QUITAR LAS CUBIERTAS
ATTENZIONE
ISOLARE MACCHINA PRIMA DI RIMOVERE COPERTURE

Trigger Signal	Relay Mode	Formula or Latched Mode with AFS selected	Formula Latched Mode Using Hot/Cold Fill, AFS not selected	Sequence Mode
T1	Pump 1	T1	T1	Drain Start (manual start)
T2	Pump 2	T2	T2	Main Wash Cold Trigger
T3	Pump 3	T3	T3	Auto Start Signal
T4	Pump 4	T4	T4	
T5	Pump 5	T5	T5	
T6	Pump 6	T6	T6	
T7	Pump 7	T7	T7	
T8	Pump 8	AFS Timing or not used	T2	Main Wash Hot Trigger

*See L5000Plus Installation and Setup Guide for full explanation

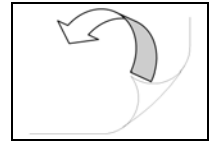

2.L5000E/SUMMIT E Trigger PCB Replacement

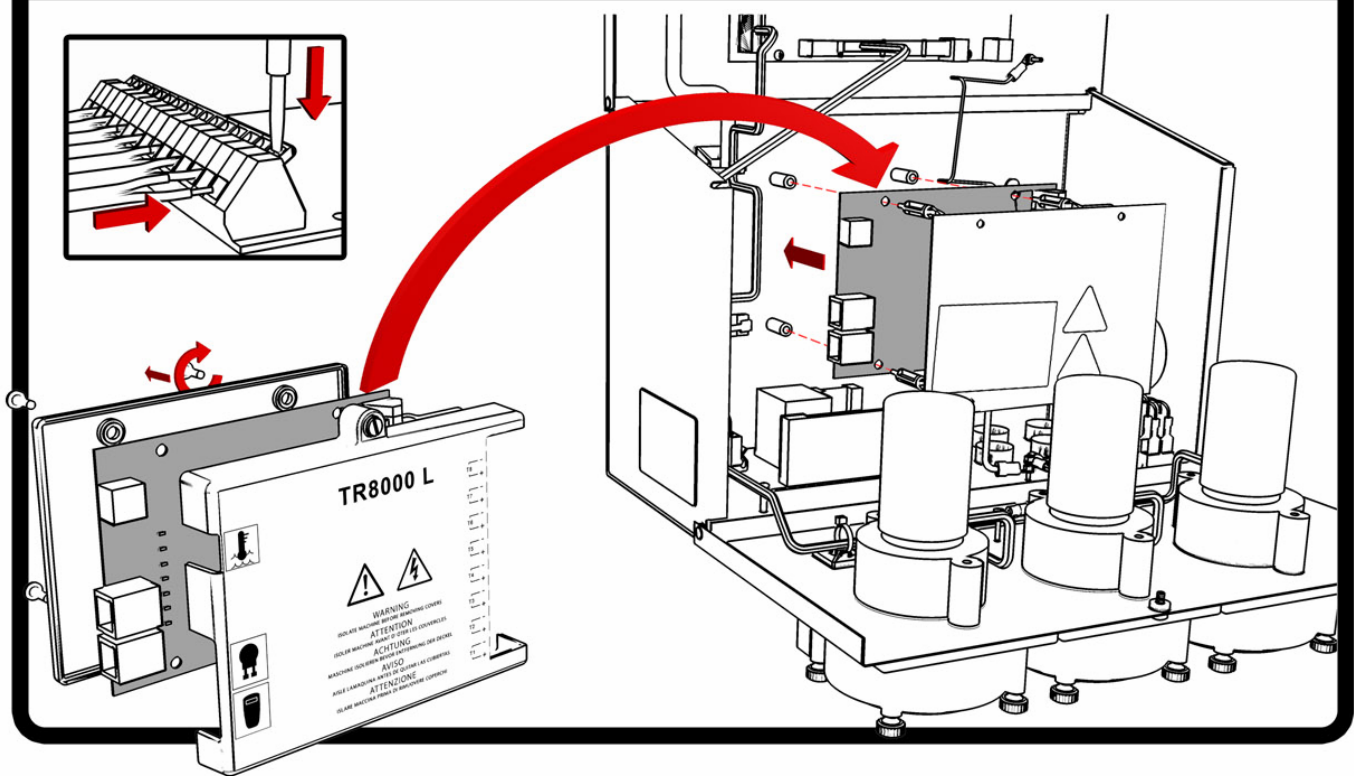

Americas, Asia and Japan
JohnsonDiversey Equipment
2841 Mission Street
Santa Cruz, CA 95060 U.S.A
Tel +1 - 831 - 457 - 5709
Fax+1 - 831 - 471 - 3587

Europe, Middle East & Africa
JohnsonDiversey Equipment
4 Finway Dallow Road
Luton LU1 1TR
United Kingdom
Tel +44 - (0) 1582 - 702191
Fax +44 - (0) 1582 - 702173

Global Technical Customer Service
Europe, Middle East and Africa : (JD) Tel: +44 - (0) 1623 - 728010
North America: Tel: +1 - 262 - 631 - 4461
+1 - 800 - 468 - 4893 (toll-free in USA)
Latin America: Tel: +1 - 541148428270
Asia Pacific: Tel: +1 86 21-50509900 x 2520
Japan: Tel: +1 090-6506-5140