

**FEATURES**

- Clinging foam
- Concentrated strength
- Non-abrasive

**BENEFITS**

- Holds to vertical surfaces
- Removes scale quickly
- Will not harm surfaces

**RECOMMENDED USES**

For descaling dishmachine equipment.

**SPECIFICATIONS**

**Color** : Light red  
**Scent/Odor** : None added  
**Character** : Clear, non-viscous liquid  
**Foam** : High

**pH use dilution** : Less than 2.0  
**Phosphorus content** : 2.8%  
**Approvals** : cRc, RBS

**IMPORTANT**

Read and understand the label and Safety Data Sheet (SDS). These provide a description of hazards, precautions, personal protective equipment, first aid, 24 Hour Emergency lines, storage data and other safe handling information. The SDS is provided with each container shipped. It is also available on our website or from the distributor.

**PRODUCT DIRECTIONS****EQUIPMENT TO USE**

Trigger sprayer, sponge, cleaning cloth, paper towels.

**DIRECTIONS TO USE**

**NOTE: AVOID FUMES WHEN USING THIS PRODUCT.** 1. Make sure dishmachine is off. 2. Point sprayer directly onto surface to be descaled. Hold nozzle 8-10 inches from surface. 3. Spray over interior surface. Allow foam to work 10-15 minutes. 4. Spray area with clean water and insure the dish tank is drained and cleaned prior to use. 5. Wipe clean with wet cloth, sponge or paper towels. Be sure all foam is removed. Rinse. 6. Repeat if necessary. Do not use on aluminum.

**PACKAGING**

This product is available in 6/32 ounce cases (100832708).

