


# Installation Instructions

## Alpine/Mesa Remote Switch



1. Cut off remote telephone connector.
2. Strip ends of red, yellow and black wires.
3. Route wires through strain relief into bottom of terminal block box.
4. Add jumper wire from contact 01- to contact 02- (see Figure below).
5. Connect black wire to 01+.
6. Connect red wire to contact 01- (leave jumper in place).
7. Connect yellow wire to contact 02+.

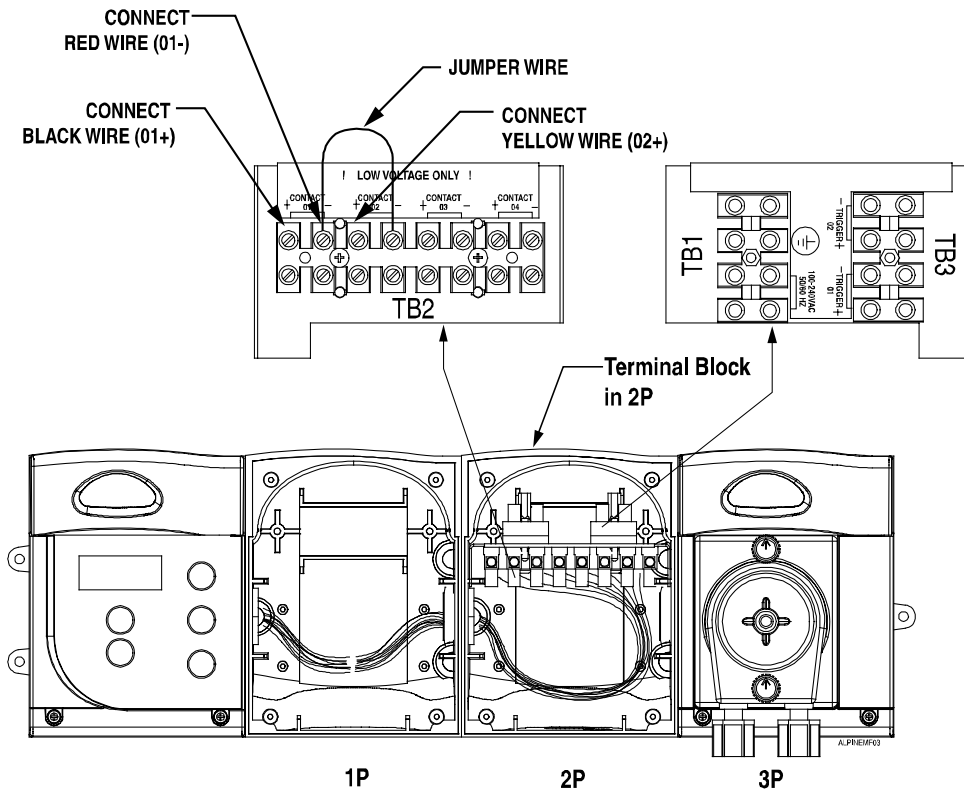

**Beta Technology, Inc**  
 2841 Mission Street  
 Santa Cruz • CA  
 U.S.A. • 95060

TEL • 831 • 426 • 0882  
 TEL • 800 • 858 • 2382  
 FAX • 831 • 423 • 4573  
 FAX • 800 • 221 • 8416  
 TEL • 800 • 215 • 6415 | Tech Support  
 sales@beta-technology.com

**Beta Technology, Inc**  
 4 Firway, Dallow Road  
 Luton LU1 1TR  
 United Kingdom

Freephone • 0800 • 052 • 4726 |  
 Tel • +44(0) • 1582 • 528600 | Customer Service  
 Fax • +44(0) • 1582 • 528111 |  
 Freephone • 0800 • 052 • 4726 | Tech Service  
 VAT REG.NO.BG.354 • 09775 • 44  
 europe.sites@beta-technology.com

Online Ordering: <http://www.beta-technology.com>