


# Installation Instruction

## Sierra Sanitizer Pump Accessory Kit

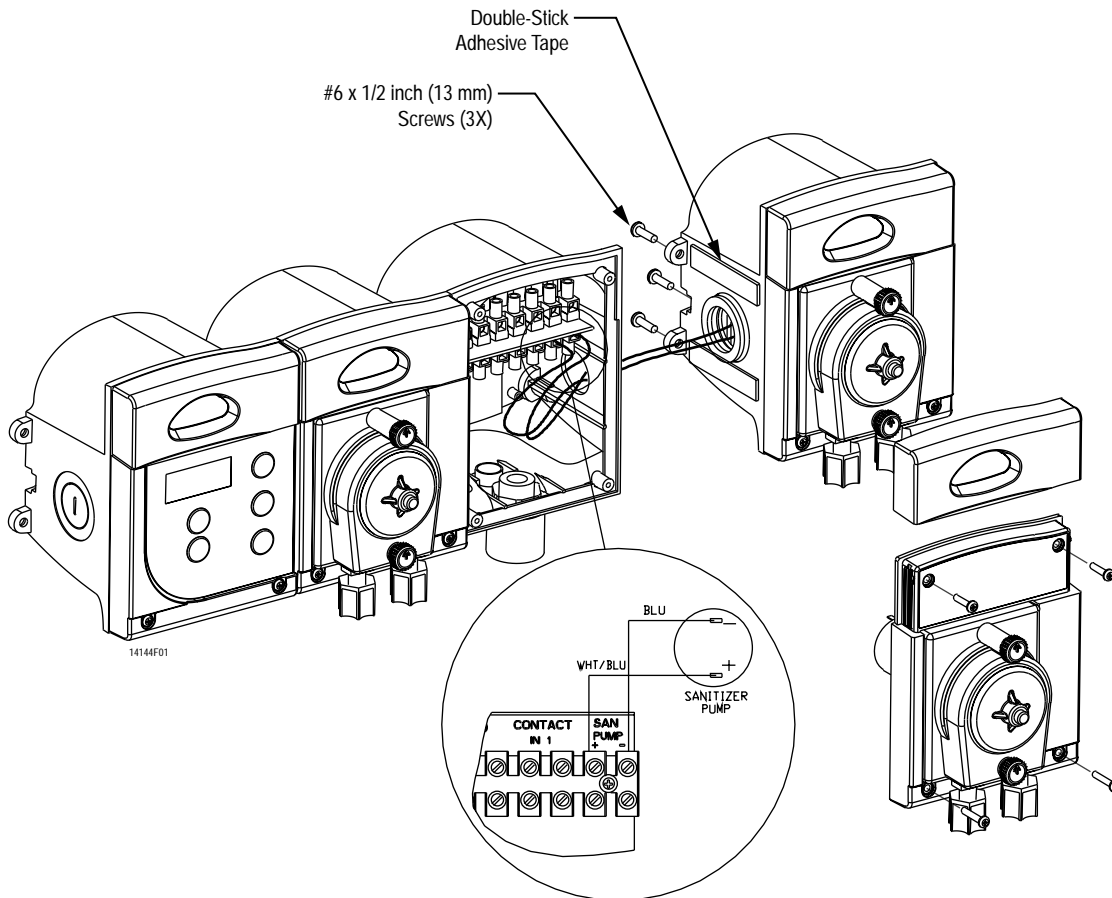

1. Remove Sierra unit from wall.
2. Remove top sliding cover of rinse pump box by inserting a small screwdriver under the right side of cover. Gently pry off, taking care not to damage the unit.
3. Remove all four screws that hold the rinse pump on the face of the unit.
4. Punch out right side knockout by inserting a screwdriver into the slot, punching through the plastic. Rotate and twist the screwdriver to completely remove the knockout.
5. Remove adhesive liner from the two strips attached to the left side of the sanitizer box.
6. Route the blue and white/blue wires from the sanitizer box into the rinse box through the knockout.
7. Fit the sanitizer box into the right side of the rinse box, aligning the interlocking tabs in the back and securing to the double-stick adhesive strips.
8. Install the #6 x 1/2 inch (13 mm) screws (3X) into the back of the unit through the interlocking tabs.
9. Pull out terminal block from rinse box and install blue wire to the (-) and the white/blue wire to the (+) of the San Pump terminals.
10. Push terminal block back into place over standoffs.
11. Replace pump cover and reinstall screws and top sliding cover.



**Beta Technology, Inc**  
2841 Mission Street  
Santa Cruz • CA  
U.S.A. • 95060

TEL • 831 • 426 • 0882  
TEL • 800 • 858 • 2382  
FAX • 831 • 423 • 4573

TEL • 800 • 215 • 6415

Customer Service  
Tech Support  
sales@beta-technology.com

**Beta Technology, Inc**

4 Firnway, Dallow Road  
Luton LU1 1TR  
United Kingdom

FreePhone • 0800 • 052 • 4726  
Tel • +44(0) • 1582 • 528600  
Fax • +44(0) • 1582 • 528111

FreePhone • 0800 • 052 • 4726  
WAT REG NO BE 354 • 09975 • 44  
europe.sales@beta-technology.com

FreePhone • 0800 • 052 • 4726  
Tel • +44(0) • 1582 • 528600  
Fax • +44(0) • 1582 • 528111

FreePhone • 0800 • 052 • 4726  
WAT REG NO BE 354 • 09975 • 44

FreePhone • 0800 • 052 • 4726  
WAT REG NO BE 354 • 09975 • 44  
europe.sales@beta-technology.com

Online Ordering: <http://www.beta-technology.com>