

Equipment Technical Bulletin

DR-2000: New 3-Pin Wire Harness on Main PCB




PROBLEM

Part number 1202397 (DR2 Main PCB) whose wire harness previously had a single 6 x 1-pin header now has 3 separate 2 x 1 pin headers. This is important to note because these new harnesses (when purchased as spares) will not work on PCB's that used the older harnesses. However, old harnesses will work with new PCB.

SOLUTION

If you keep stock of these harnesses as spares, make sure that you do not pair a new harness with a PCB that previously had the 6 x 1-pin header harness.

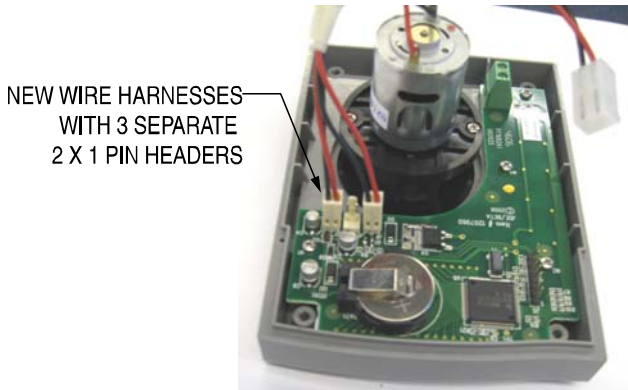

DR-2000 Main PCB.



Beta Technology
2841 Mission Street
Santa Cruz • CA
U.S.A. • 95060-2142

TEL • 831 • 426 • 0882
TEL • 800 • 858 • 2382
FAX • 838 • 423 • 4573
FAX • 800 • 221 • 8416

Beta Technology is ISO9001 Certified