Installation Instruction Remote Switch

This instruction explains how to wire the remote switch to your dispenser.

- Cut the remote switch cable and strip enough of the insulation off to expose the red and black wires.
- 2. Strip the ends of the red and black wires.
- 3. Remove front cover of dispenser so that you can see the PCB.
- 4. You will see 3 wires connecting from the rocker switch to the PCB. They are brown, gray and green. See Figure 1.
- 5. Cut and strip the ends of the brown and gray wires. Leave the green wire as is.
- Splice the remote switch black wire to the rocker switch gray wires, and the remote switch red wire to the rocker switch brown wires.
- 7. Secure connections with wire nuts.
- 8. Replace the dispenser front cover.
- 9. Press the remote switch button to operate.

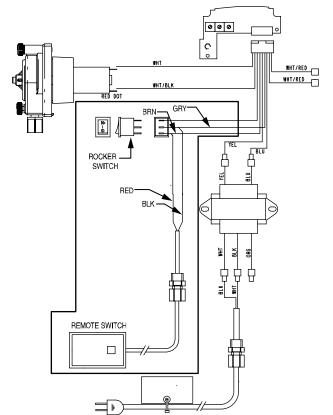


Figure 1. Remote switch/rocker switch wiring connections.

1