


# COMBI OVEN CLEANING PROCEDURES

## DAILY CLEANING



**STEP 1:** Open the oven door. Place the oven in cool down mode. Let the oven cool to below 140°F (60°C).

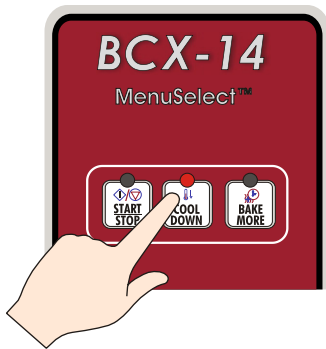

**STEP 2:** Fill the spray bottle with a mild oven detergent. We recommend USC Liquid Fury. **DO NOT USE ABRASIVE CLEANERS.** Be sure to read and follow the SDS or safety instructions on the bottle of your oven cleaner.



**STEP 3:** Wipe out excess debris from oven.



**STEP 4:** Spray the interior of the oven.



**STEP 5:** Close the door. Place the oven in steam mode for 10 minutes.



**STEP 6:** When finished steaming, open the door and rinse the interior with the attached spray hose.




**STEP 7:** Leave the door open overnight to vent the oven.

*If the oven will not be used for an extended period of time, place the oven in hot air mode to dry.*


# DELMING

Deliming the steam generator is the single most important preventative maintenance task. Lime will build up inside the generator, reducing efficiency and causing damage to the boiler.

**NOTE:** Once the deliming process has been started, the oven cannot be used until deliming is complete, approximately 45 minutes.

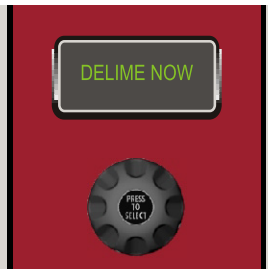

**STEP 1:** When it is time to delime your oven, the display reads **DELIME NOW**. Press the escape key to clear the display. The message will return until the unit is delimed. **This is a warning only, the oven can be used all day before deliming.**

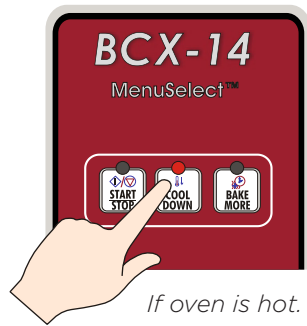

*If oven is hot.*



*If oven is cold.*

**STEP 2:** The boiler should be warm to delime. If the oven is hot, place in the cool down mode with the door open until the cavity is below 140°F (60°C). If the boiler is cold, place oven in the steam mode for approximately 10 minutes.




**STEP 3:** Fill the deliming fluid container. Use a non-diluted deliming agent such as Surety™ Delimer or USC Lime-Out. *Be sure to read and follow the SDS or safety instructions on the bottle of your deliming agent.*



**STEP 4:** If you heated the boiler in step 2, open the oven door and place the oven in cool down mode.



**STEP 5:** Press the Maintenance Key.

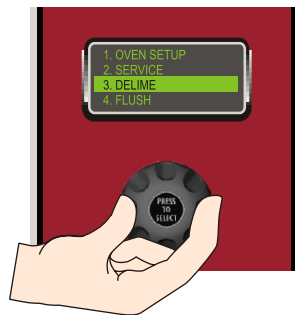

**STEP 6:** Turn the dial to highlight **DELIME**. Press the center of the dial to select.



**STEP 7:** Turn the dial to highlight **START DELIME**. Press the center of the dial to select.



**STEP 8:** Turn the dial to highlight **YES**, this confirms that you want to begin the deliming process. Press the center of the dial to select. The remainder of the process is automatic. The display counts down the fill and delime time remaining.



**STEP 9:** When the deliming process is complete, the control enters the energy save mode. The oven can now be used normally.