
DR-2000

Quick Programming Guide



Programming Buttons

The DR-2000 is programmed using the 5 button as shown below.

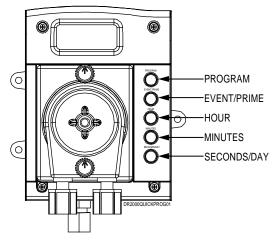

Entering Program Mode

The DR-2000 is in Run mode during normal operation, displaying the current time and day of the week. The colon blinks twice per second.

To enter Program mode, hold down the Program button for 8 seconds. Once you have successfully entered Program mode, the screen content will not change, but the colon will stop blinking.

Setting the Clock



The top line on this screen shows days of the week, 1-7. The bottom line shows the time. For PM settings, a "P" is displayed. Use the HOUR and MINUTES buttons to change to the current time. Use the SECONDS/DAY button to change the day. We recommend that you program Monday as day 1.

Programming When an Event Will Occur



- Press the EVENT/PRIME button once. This screen appears. "E" stands for "event" and the number after it is the event number, 01-24 (event #1 in this case).
- Press the EVENT/PRIME button again. Set the time that you want the event to occur using the HOUR and MINUTES buttons, and set the day of the week you want it to occur using the SECONDS/DAY button.
- Days of the week are selectable individually, all 7 together, weekdays only or weekends only.

Programming Duration of Event



Once you have programmed when the event will occur, press the EVENT/PRIME button again. The screen will display the day and duration of the event. MIN:SEC displays at the bottom. Using the MINUTES and SECONDS/DAY buttons, set the duration of the event. Maximum duration is 19 minutes and 59 seconds.

Clearing Unwanted Events

- Go to the event screen of the first event you want to clear.
- 2. Press and hold the HOUR and MINUTES buttons.
- While still holding the HOUR and MINUTES buttons, press and hold the EVENT/PRIME button. The unit will scroll through all higher-numbered events from the first cleared event and clear them (by setting the duration to "000").



Beta Technology 2841 Mission Street Santa Cruz • CA U.S.A. • 95060-2142 TEL • 831 • 426 • 0882 TEL • 800 • 858 • 2382 FAX • 838 • 423 • 4573 FAX • 800 • 221 • 8416